



**Step 1** - Insert PyrOnode into the retainer ensuring fibre holes align with provision as shown.




**Step 2** - Align both retainer and cable mount body with both fibre provisions together as shown.

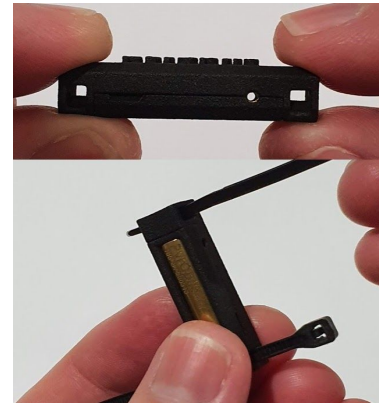


**Step 3** - Clip retainer and cable mount body together ensuring fibre holes are free from obstruction.

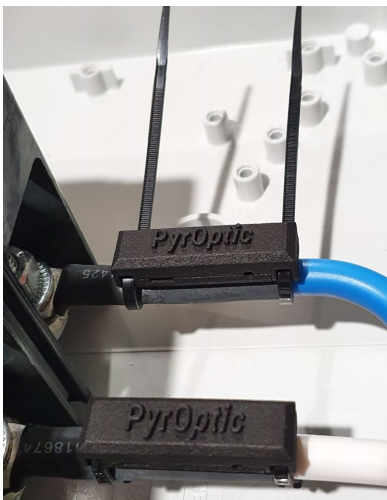

**Step 4** - Attached cable mount PyrOnode exposed side to insulated cable using 2 x Panduit (BT2M-M30) cable ties as shown. Trim cable tie tails.

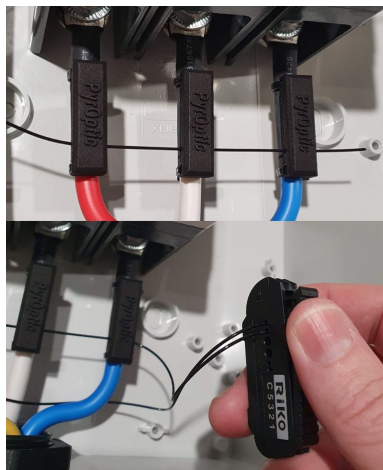

**Step 5** - Route plastic optical fibre (POF) through the series of PyrOnodes and loop back to the fibre amplifier. Cleave ends of fibre with fibre cleaver as shown. Reinstall phase terminal shrouds.

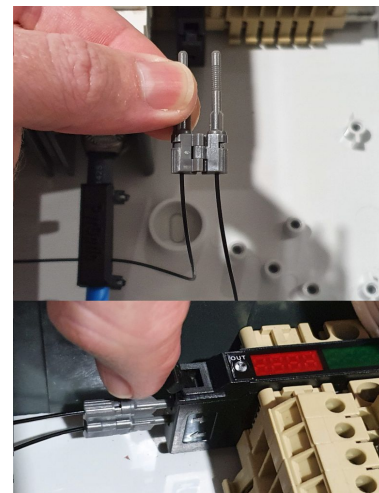

**Step 6** - Insert both ends of fibre loop into relay adapter flush with the other end. Ensure adapter is locked onto each fiber then connect to fibre amplifier as shown.

For technical support or queries regarding PyrOnode installation, please contact [sales@pyroptic.com](mailto:sales@pyroptic.com)